

D1


User Manual V1.0

CONTENTS


- (EN) English 11
- (DE) Deutsch 12
- (FR) Français 13
- (ES) Español 14
- (IT) Italiano 15
- (NL) Dutch 16
- (SE) Swedish 17
- (CZ) Čeština 18
- (HU) Magyar 19
- (SK) Slovenčina 20
- (CN) 简体中文 21
- (JP) 日本語 22
- (KR) 한국어 23

Product List

Before using this product, please check whether the contents of the package are complete.

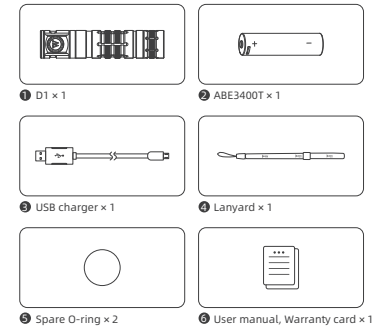


About Product

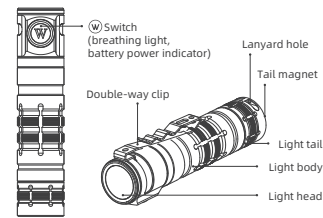


Installation

Please remove the insulation plate before using it.

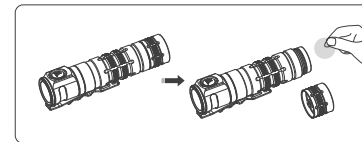


Operation

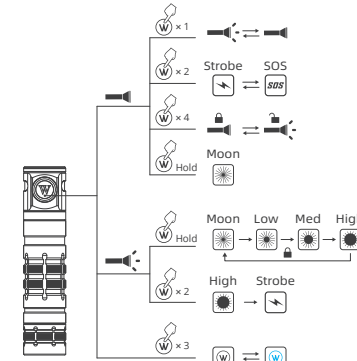


Battery Charge And Discharge


Charging

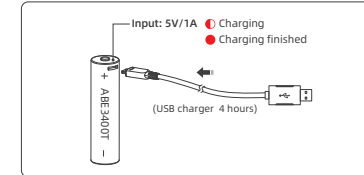

Discharging

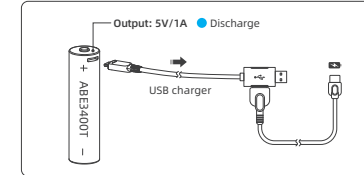

Battery Capacity (C) Status Indication

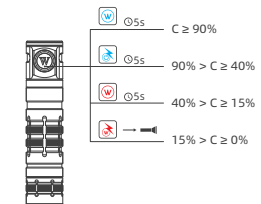

Battery Recommended

Battery Type	Description	Recommended Use	Cautious Use	Prohibited Use
18650	3.7V battery with protection board	✓		
18650	3.7V battery without protection board		✓	
CR123A	3V non-rechargeable battery		✓	
RCR123A	3.7V rechargeable battery			✓
16340	3.7V rechargeable battery			✓
18350	3.7V rechargeable battery			✓

Parameters

Standard	High	Med	Low	Moon	Strobe	SOS
	1100~400 Lumens	300 Lumens	100 Lumens	5 Lumens	1100 Lumens	300 Lumens
	30s + 2.5 Hours	5 Hours	30 Hours	150 Hours	/	/
	130 Meters			1.5 Meters		
	4200 Candelas			IP68 (2m underwater for 1h)		
	62g/2.19oz (without battery) 109g/3.85oz (with battery)					
	105mm × 23.5mm 4.13in × 0.93in (L × D)					

⚠ All data from experiments of WUBEN lab according to quality standard may vary because of different experiment equipment, experiment environment, or other factors. Experiments are based on WUBEN ABT3400T Li-ion battery.

Product Warranty | 製品保証カード | 产品保修凭证

Name / お名前 / 客户姓名 _____

Telephone / 電話番号 / 联系电话 _____

Address / 住所 / 联系地址 _____

Model number / 製品型番 / 产品型号 **D1** _____

Product series number / 製品コード / 产品编码 _____

Name of store / 販売店 / 购买商店 _____

Date of purchase / 購入日付 / 购买日期 _____

Get your e-warranty card and e-user manual by visiting the following URL or scanning the QR code.



<https://www.wubenlight.com/pages/product-registration>

Maintenance

- The O-Ring may be damaged for a long time use, please replace the O-Ring in time to ensure the waterproof level of the product.
- Please use WUBEN battery or WUBEN recommended batteries.
- When the product indicates low power, please charge or replace the battery in time to avoid affecting the durability of the battery.
- Please use alcohol and rag to clean the conductive parts of the product in time.
- When not in use for a long time, please remove the battery to prevent the battery from leaking or exploding, store the product in a dry and ventilated place.

FAQs

Problems	Causes	Solutions
Abnormal flash or failure to turn on	Check if the switch is locked	Unlock the switch
	Check if the switch is turned on correctly	Turn on the switch
	Check if it is assembled in place	Tighten the assembly parts
	Check if the battery is no power	Try the battery on other products
Abnormal noise	Check if the battery is reversed	Remove the battery and reassemble it correctly
	Check if the conductive position is dirty	Clean the surface with alcohol
	Check if foreign matter falls in the tube	Pour out possible foreign matter
	Part damage	Contact your seller

If your problems still not solved yet, please contact WUBEN Headquarters for after-sales service.

Warranty Policy

1. Warranty Coverage

- 15 days replacement:** Within 15 days from the date of purchase, if the product has quality problems, customers can request free replacement.
- 1 year warranty:** Within 1 year from the date of purchase, if the product has quality problems, WUBEN will offer free repair.
- 5 years warranty:** Within 5 years from the date of purchase, if the product (accessories excluded) has quality problems, WUBEN will offer free repair for WUBEN registered customers.
- Battery warranty:** WUBEN offers a 1-year warranty for the rechargeable batteries but other included accessories are not covered by the warranty.
- Lifetime maintenance:** From the date of purchase, if the product has problem after 5 years, WUBEN will offer paid repair for WUBEN registered customers.
- If proof of purchase cannot be provided, it will be counted on the date of manufacture.
- If there is any dispute, the two parties will coordinate to solve.

2. Beyond Warranty

- Man-made damage.
- Damage caused by not following the instructions.
- Damage caused by improper use of the battery.
- Abnormal wear and tear.
- Damage caused by irresistible factors.
- Gifts.

The final interpretation right is reserved by WUBEN.

Warnings

- Please read user manual carefully before using the product.
- Product will generate heat while working, please be cautious with that to avoid any possible harm.
- Please don't shine into eyes directly to avoid harm to eyes.
- Please keep the product away from children.
- Please use WUBEN or WUBEN recommended batteries.
- Please don't disassemble the product or it will not be covered by WUBEN warranty policy.
- Please don't throw the product into fire.
- This is not a diving product, please don't use it underwater for a long time.
- LED will generate greater heat while working, please keep the main product away from other objects to avoid product damage or other danger caused.

SHENZHEN SHENGQI LIGHTING TECHNOLOGY CO., LTD.

E-mail: support@wubenlight.com
Web: www.wubenlight.com
Add: 202#, Building A, Jilhe E-Business Park, No. 33 Yangmei Road, Bantian Street, Longgang District, Shenzhen, China



(EN) English

Operation

- ON/OFF:** Single click the Ⓜ switch to turn on the flashlight, click again to turn it off. The flashlight has memory function, will memorize default output selections, but not flash modes.
- Default Output Selections:** When the flashlight is on, press and hold Ⓜ switch to cycle through Moon-Low-Med-High-Moon, release to select your desired output.
- Quick Turbo:** When the flashlight is on and not High mode, double click the Ⓜ switch to activate the highest mode, single click to turn off the flashlight.
- Quick Moon:** When the flashlight is off, press and hold Ⓜ switch to activate Moon then cycle through the default output levels, single click to turn off the flashlight.
- Flash Modes:** When the flashlight is off or at High mode, double click the Ⓜ switch to activate Strobe, double click again to activate SOS. Single click to exit flash modes.
- Lock/Unlock:** When the flashlight is off, 4 times click the Ⓜ switch, the main light will blink 3 times to indicate the locking of the flashlight. Any operation on Ⓜ switch will activate 3 times flashing of the indicator, unless another 4 times click the Ⓜ switch which will activate Low mode, to indicate the unlocking of the flashlight.

Breathing Light

Triple click Ⓜ switch to turn on/off the blue breathing light, it has power-off memory function.

(DE) Deutsch

Betriebsmethode

- EIN / AUS:** Klicken Sie einmal auf den Ⓜ-Schalter, um die Taschenlampe einzuschalten, und klicken Sie erneut, um sie auszuschalten. Die Taschenlampe verfügt über eine Speicherfunktion und speichert die Standardausgangsauswahl, jedoch nicht die Blitzmodi.
- Ausgangsauswahl:** Wenn das Licht an ist, halten Sie den Ⓜ-Schalter gedrückt, um durch Mond-Low-Med-High-Mond zu schalten, und lassen Sie ihn los, um den gewünschten Ausgang auszuwählen.
- Schnell und extrem hell:** Starten Sie den nicht extrem hellen Modus, doppelklicken Sie auf die Ⓜ-Taste, um extrem hell aufzurufen, und klicken Sie, um die Taschenlampe auszuschalten.
- Schneller Mondscheinmodus:** Halten Sie im ausgeschalteten Zustand die Ⓜ-Taste gedrückt, um in den Mondlichtmodus zu wechseln. Sie können den Gang einstellen, ohne loszulassen, und klicken, um die Taschenlampe auszuschalten.
- Blitzmodi:** Wenn die Taschenlampe ausgeschaltet ist oder sich im High-Modus befindet, doppelklicken Sie auf den Ⓜ-Schalter, um Strobe zu aktivieren, und doppelklicken Sie erneut, um SOS zu aktivieren. Ein Klick, um die Blitzmodi zu verlassen.
- Taschenlampe sperren / entsperren:** Drücken Sie im ausgeschalteten Zustand die Ⓜ-Taste viermal und die Frontleuchte blinkt dreimal, um die Verriegelung anzuzeigen. Drücken Sie die Ⓜ-Taste und die Anzeigelampe blinkt dreimal, um Sie daran zu erinnern. Drücken Sie die Ⓜ-Taste erneut viermal und der niedrige Gang leuchtet auf, um anzuzeigen, dass die Verriegelung aufgehoben ist.

Licht atmen

Dreifachklick-Ⓜ-Schalter zum Ein- und Ausschalten des blauen Atemlichts. Es verfügt über eine Funktion zum Ausschalten des Speichers.

