

**CUBIC ALARM CLOCK**  
方块闹钟

Operating manual  
使用说明书

V1.0

• Thanks for buying our product. Please read this instruction and attention carefully for better use. To save this instruction and warranty card for further reference.

CE RoHS

English

**Overview**

Labels: Clock display, Rotary switch, USB charging port, Reset, Clock 1, Clock 2, Delay function, Package accessories: USB charging line.

Labels: Time button, Clock 1, Clock 2, Delay function, Rotary Switch/Confirm Button, Package accessories: USB charging line.

**Introduction of function button**

**Time button**  
Press to check date, long press to set time system, time and date.

**Clock 1**  
Click to check the alarm clock 1, long press to set the alarm clock 1, double click to turn on/off the alarm clock.

**Clock 2**  
Click to check the alarm clock 2, long press to set the alarm clock 2, double click to turn on/off the alarm clock.

**Delay off function**  
Press to check the time for delay light OFF, long press to set, double click to turn on/off the function.

**Rotary Switch/Confirm Button**  
Press: Turn ON/OFF light. Press when alarm sounds to turn on the snooze function.  
Rotate: Adjust the lighting intensity, adjust the displayed numerical value.

**RESET**  
Click to restore factory settings.

**Introduction to display icons**

**Time**  
The icon is displayed in setting time system and time.

**12-hour format (am, pm)**  
12-hour format, displayed when you check time/alarm and off time.

**DATE**  
Date  
Displayed when you check date/set date.

**Clock 1, Clock 2**  
Show when clock 1, 2 set start.

**Alarm for holidays**  
Displayed when you check alarm/ring alarm.

**Alarm for working days**  
Displayed when you check alarm/ring alarm.

**Zz** Snooze  
Alarm under snooze.

**Delay off function**  
Show when clock 1, 2 set start.

**Seconds for delay light OFF**  
Displayed when you check and set time for delay light OFF.

**Weak current prompt**  
Flash code regularly in the state of weak current, to prompt weak current.

**Prompt for charging**  
Be once every 15s charging state after the clock is connected to power, and disappear after full charging.

**Instructions for use**

**Night light function**  
Press one time to on/off light. Rotate to adjust brightness.

**Rotary Switch**

**Press:** To start snooze mode when pressing it after alarm sounds, it is also the Confirm key for setting.

**Rotate knob:** To adjust the displayed values.

**Delay off function**

**Press:** To check the time for delay light OFF.

**Double click:** To start delay light OFF function (accompanied with prompt tone).

**Long press:** To enter setting of time for delay light OFF.

**Rotate knob:** To adjust light intensity (adjust the numerical value of time for delay light OFF).

**Press knob:** To turn OFF light.

**Alarm function**

**Two sets of alarm clocks**  
Two sets of alarm clock C1 and C2 can be set, switch as you please among morning, noon, weekdays and weekends.

**Turn on/off the alarm clock**  
Double click the button C1 or C2, turn on/off the alarm clock. (Accompanied with prompt tone.)

**Snooze alarm clock**  
Press the knob switch after alarm sounds to start snooze function (accompanied with prompt tone), and the snooze prompt Zz on display picture lights up. The alarm sounds again from later, and you need to repeat setting in snooze. If snooze clock, press any key on the back to directly turn off the alarm for that day.

**Turn off the alarm clock of the day**  
After the alarm rings, click any key, the button can directly turn off the alarm clock of the day. When no one clicks after 3 minute alarm, it will turn off the alarm clock of the day automatically.

**Automatic light wake-up**  
The wake-up light increasingly lights up when alarm clock rings. The automatic light wake-up function is initiated until the alarm goes off. (The light becomes OFF automatically when the snooze function is started).

**Operation setting**

**Time setting**  
Long press the clock key C1 on the back to enter time setting, i.e. enter setting of time system, clock, zone and date system, rotate the knob to adjust numerical value, press to confirm the setting.

Setting state of 12-hour format, Setting state of 24-hour format, Setting state of clock, Setting state of year, Setting state of date, Displaying state of 12-hour format.

**Alarm setting**

Long press the clock key C1 on the back to enter setting of clock, i.e. enter setting of hour, minute, working days and holidays, rotate the knob to adjust numerical value, press to confirm setting.

Setting state of alarm time, Setting state of alarm clock for working days, Setting state of alarm clock for holidays.

**Other display status (the setting mode of clock 2 please refer to clock 1):**

Activation state of 2 sets of clocks, No clock state, Clock 2 activation state.

**Power mode**

USB charging port, Function reserved.

1200mAh 3.7V battery was built-in, can be charging by USB card or computer. Can be used directly out of power.

**Battery indicator**  
The light curve prompt on display picture becomes over-bright in the state of light current, to prompt the need for charging. After power is connected, the battery pin has been charged cyclically for three times, and charging prompt becomes over-bright, prompting starting of charging. (The automatic wake-up function is disabled when light current is displayed, but when charge the clock battery.)

**Specifications**

Product	CUBIC ALARM CLOCK
Item No.	H-CU-04
Parent No.	32201000100079.0
Materials	ABS, PMMA
Size	50mm x 34mm x 17mm
Weight	144g
Rated voltage	3V ~ 1A
Rated power	3.3W
Battery capacity	1200mAh
Light color	4200K (warm white)
color	Milky white, Psa green, Brick red
Executive Standard	GB/T 22777-2008 GB/T200-204-2008

Warning: Do not disassemble the product.

**Sleep mode**

Simultaneously press and hold the clock 1 button C1, clock 2 button C2 and rotate the switch, then it will enter sleep mode. Long press the side knob or insert the power cord to charge when using again.

**Safety caution**

1. Don't disassemble, repair or refill this product.
2. Don't put water on or use wet hand to operate.
3. Don't use in high temperature and high humidity environment.
4. Avoid strenuous vibration, strike or squeeze to avoid damage.
5. Don't place in or drop into water or other liquid.
6. Don't put the product on a incline or unstably table to avoid slide down.
7. If any unusual happens, please stop using.
8. This unit should not be used by children under 3 as small parts included.
9. Adaptor (not included), please buy a standard adaptor which comply with government 3C certification (GSV 3A).