



L60

 
User Manual V1.2

⚠ WARNINGS

- Please read the user manual carefully before using the light.
- Product will generate heat while working, please be cautious with that to avoid any possible harm.
- Please don't shine into eyes directly to avoid harm to eyes.
- Please keep the light away from children.
- Please use WUBEN or WUBEN recommended batteries.
- Please don't disassemble the light or it will not be covered by WUBEN warranty policy.
- Please don't throw the product into fire.
- This is not a diving product, please don't use it underwater for a long time.

Product List


Before using this product, please check whether the contents of the package are complete.

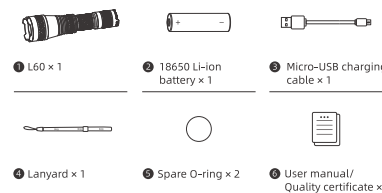

Product operation


1. About product

 L60 is a multi-functional zoomable flashlight. Utilized 1 × CREE XP-L2 V6 LED, powered by 1 pcs 18650 high-drain Li-ion Battery, it emits 1200 lumens output. Built-in waterproof Micro-USB charging port in the tail, make it possible to charge the battery directly. Rotate the head of the flashlight to zoom in to floodlight and out to spotlight, and different output for hiking, camping, and other scenarios.

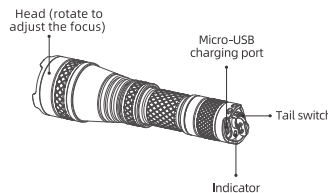

2. Installation

 Please remove the insulation plate before using.




3. Operation

- 1 **ON/OFF:** Click on the tail switch to turn on the flashlight, click again to turn off the flashlight.

- 2 **Output selections:** When the light is on, tap on the tail switch to cycle through Eco-Low-Med-High. Every time the flashlight will be turned on the memorized output on which the light was turned off.
- 3 **SOS:** When the light is on, fast double tap on the tail switch to activate SOS, tap again to exit.

4. Focus adjust

 Rotate the head of the flashlight to zoom in to floodlight and out to spotlight.



5. Low battery indication

When the remained runtime is less than 30 minutes no matter in which output, the flashlight will flash 3 times every 5 minutes till power off.

6. Charging

When the light is off, open the rubber cap to expose the Micro-USB charging port, plug charging cable according to the correct direction, and connect to power source to charge. It takes about 4 hours to fully charge it (5V/1A).

| | |
|--|---|
| Red light constant on | Charging |
| Green light constant on | Charging finished |
| Red light and green light alternatively on | Poor contact |
| Red light flashes | Battery damaged |
| Green light flashes | Light is on or wrong battery installation |

- ⚠ Please only use battery with protection circuit board.
- ⚠ Without the protection of the rubber cap, the Micro-USB is waterproof but not dustproof.

Parameters

| FL1 Standard | High | Med | Low | Eco | SOS |
|--------------|---|-------|-------|-----------------------------|-------|
| | 1200LM | 360LM | 72LM | 4.8LM | 200LM |
| | 1.8h | 3h | 15.4h | 219h | / |
| | 320m | | | 1m | |
| | 25600cd | | | IP68 (2m underwater for 1h) | |
| | 128g/4.52oz(without battery) 175g/6.17oz(with battery) | | | | |
| | 148mm × 39mm 5.83in × 1.54in (L × D) | | | | |

⚠ All data from experiments of WUBEN lab according to the ANSI/NEMA FL1 standard, may vary because of different experiment equipment, experiment environment or other factors. Experiments are based on WUBEN 18650 Li-ion battery (2600mAh).

Accessories recommendation

Holster, ABE3400 battery, ABE3100C battery

Maintenance

- The O-Ring may be damaged for a long time use, please replace the O-Ring in time to ensure the waterproof level of the product.
- Please use WUBEN battery or WUBEN recommended batteries.
- When the flashlight indicates low power, please charge or replace the battery in time to avoid affecting the durability of the battery.
- Please use alcohol and rag to clean the conductive parts of the flashlight in time.
- When not in use for a long time, please remove the battery to prevent the battery from leaking or exploding, store the flashlight in a dry and ventilated place.

FAQs

| Problems | Causes | Solutions |
|--------------------------------------|--|--|
| Abnormal flash or failure to turn on | Check if the switch is turned on correctly | Turn on the switch |
| | Check if it is assembled in place | Tighten the assembly parts |
| | Check if the battery is no power | Try the battery on other products |
| | Check if the battery is reversed | Remove the battery and reassemble it correctly |
| Abnormal noise | Check if the conductive position is dirty | Clean the surface with alcohol |
| | Check if foreign matter falls in the tube | Pour out possible foreign matter |
| | Part damage | Contact your seller |

If your problems still not solved yet, please contact WUBEN Headquarter for after-sales service.

Warranty policy

1. Warranty coverage

- **15 days replacement:** Within 15 days from the date of purchase, if the product has quality problems, customers can request free replacement.
- **1 year warranty:** Within 1 year from the date of purchase, if the product has quality problems, WUBEN will offer free repair.
- **5 years warranty:** Within 5 years from the date of purchase, if the product (accessories excluded) has quality problems, WUBEN will offer free repair for WUBEN registered customers.
- **Battery warranty:** WUBEN offers a 1-year warranty for the rechargeable batteries but other included accessories are not covered by the warranty.

- **Lifetime maintenance:** From the date of purchase, if the product has problem after 5 years, WUBEN will
- If proof of purchase cannot be provided, it will be counted on the date of manufacture.
- If there is any dispute, the two parties will coordinate to solve.

2. Beyond warranty

- Man-made damage.
- Damage caused by not following the instructions.
- Damage caused by improper use of the battery.
- Abnormal wear and tear.
- Damage caused by irresistible factors.
- Gifts.

The final interpretation right is reserved by WUBEN.

SHENZHEN SHENGQI LIGHTING TECHNOLOGY CO., LTD.

Web: www.wubenlight.com
 Add: 202#, Building A, Jihe E-Business Park,
 No. 33 Yangmei Road, Bantian Street,
 Longgang District, Shenzhen, China



WUBEN website Facebook