

# **English**

## Product:

\*With three highlight LED lamp beads
-A super-bright high power lamp bead from Corey of
United States provides remote spot lighting
-Two high-performance red lamp beads, providing night
signal lighting.

\*Three lighting mode: High, Middle, Low

- ★ I hree lighting mode: High, Modle, Low Operating Instruction:
  ★ Gently press to focus light, middle-high-low-off(see pic. 2)
  ♣ Press and hold the button for 1s from focus light to red, high-strobe-SOS-off
  ♣ Press and hold the button for 1s from red to focus light
  ★ Adjusting the light exceed 3minutes to turn off it

## Power indicator:

- ★ Color changing indicator light(see pic. 4)
  ★ Power indicate: above 30% in green, 30%-5% in red, less
- than 5% in red strobe

  ★ Charging indicate: full charged in green, less then 95% in red strobe

## Instructions for use:

- ★ Do not use the product in the extremely cold or hot environments (below -10 € or above 50 €). ★ This product is ordinary waterproof IPX5. In case of heavy rain or rainstorm,try to avoid using

### Energy:

\*\* When using Li-polymer battery as the power sources:

- Use high-quality Li-polymer battery for products

- Do use special Li-polymer battery provided by Surree,
so as not to damage the lamp.

\*\*Please recycle used batteries reasonably

### Maintenance:

- waintenance:

  If the product is affected with damp, remove the battery and dry them.

  Do not make the lamp lenses rubbing with other hard objects. The worn lens will affect the light.

  If the product is not used for a long time, remove the batteries to prevent battery depletion or battery fluid leakage.

# Troubleshooting: ★ If the battery is installed, the lamp does not work properly,

- If the dately is installed, the lating does not work properly, please:

  -Press the switch button several times to try.

  -Check that the battery polarity is correctly installed.

  -Check whether there is debris on the contacts which led to poor contact.

  -Check whether there is water on the lamp. After it is dried,
- try again.
- Caution:

- Caution:

  ★ Before the lamp is used, be sure to read this manual carefully for proper use and maintenance.

  ★ Children under 12 years of age should use the product under the adult's supervision and guidance.


  ★ Always set aside a spare lamp and a few spare batteries.

  ★ Do not disassemble this product.

### Warranty:

 
\*The Company promises to each customer solemnly, for quality problems caused by the product design or manufacturing defect, you can contact your local dealer for warranty issues against the invoice and the proof of purchase within two years from the date when it is purchased, but the damage caused by improper use does not belong to this range.

www.sunreegear.com

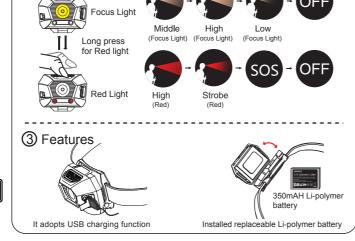






























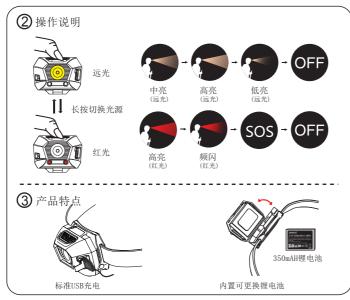

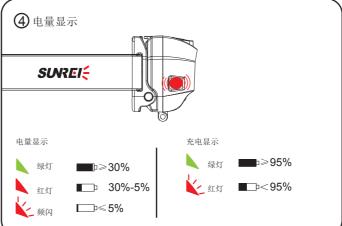

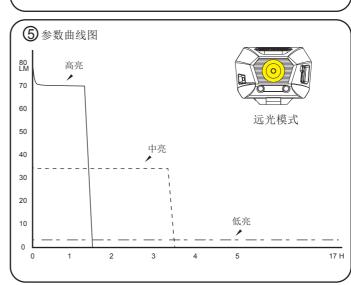

## 中文

**産品:** ★擁有一顆高亮白光LED燈珠

★擁有一個局兒日光ED燈床
 -1顆高亮美麗科瑞士力率燈珠,提供聚光照明
 -2顆高亮紅光燈珠,提供夜間信號照明
 ★ 二檔照明亮度:高亮、中亮、低亮 操作說明:
 ★ 一報送人遠光模式,中亮→高亮→低亮→熄滅(见图2)
 ★ 在遮光模式長按1秒進入紅光模式,高亮→頻閃→SOS

→熄滅 ★在紅光模式長按1秒進入遠光模式

★開啟狀態下超過3分鐘再調光可以熄滅

**電量顯示:**★雙色指示燈(见图4)
★電量顯示: 30%以上亮絳燈, 30%-5%亮紅燈, 小于5% 红熔瓶阴

★充電指示: 100%—95%綠燈常亮, 95%以下紅燈頻閃

12-/ IJBR 1973:
★請勿將本品在零下10 C以下或零上50 C以上的極寒極熱環境下使用

★本品僅限普通防水IPX5,如遇大雨或暴雨,请尽量避免使 能源:

\*選用雞電池作為能源時:
--請使用優質聚合物鋰電池爲本品供電
--請使用标配充电鋰电池,勿使用其他杂牌替代品,以免 造成灯具损坏

★請合理地回收廢舊電池

保養: ★産品受潮後,請將電池卸下並晾幹

本請勿將撥單前鏡片與其它硬物學療,若鏡片階損會影響透光 ★ 若未来—个月內不使用头灯,請將電池取出,以免電量耗 損或電池漏液

常見故障:

★如果安裝電池後壁具無法正常工作,請:-多試幾次開關按鍵-檢查電池極性安裝是否正確

--檢查觸片是否有雜物而導致接觸不良 --檢查燈具是否有進水現象,可晾幹後再試

★ 請勿使用劣質的聚合物鋰電池,有發生火災以及爆炸的風險 ★ 在開燈使用前,請務必認真閱讀本說明書,以便正確地使用 與保養

與床實 ★12歲以下孩童請在大人監管與指導下使用本品 ★永遠預留一個備用歷具以及幾組備用電池 ★請勿自行拆卸本品 ★請勿自行改裝本品



Интернет-магазин светодиодных фонарей www.sunreegear.com