 


P45R

User Manual

V 1.0

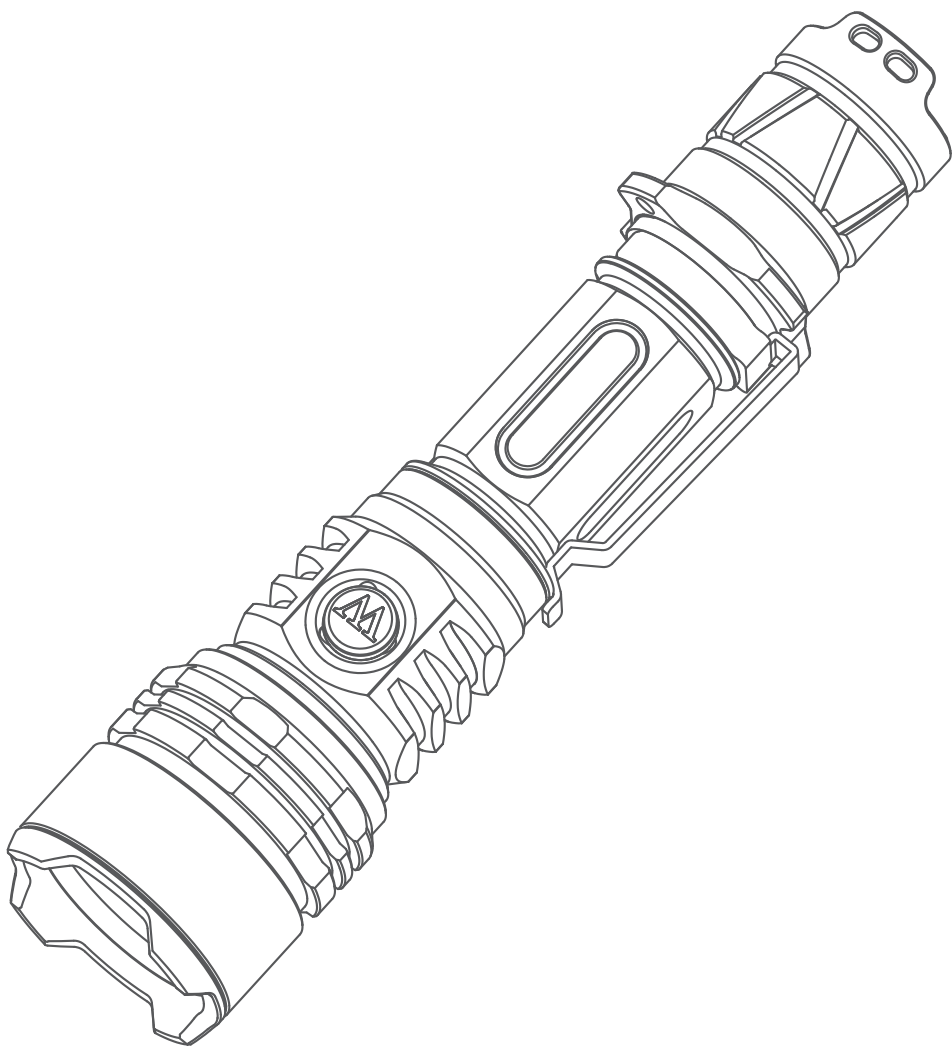

 
WUBEN[®]
SINCE 1981

WARNINGS


- Please read user manual carefully before using the light.
- Product will generate heat while working, please be cautious with that to avoid any possible harm.
- Please don't shine into eyes directly to avoid harm to eyes.
- Please keep the light away from children.
- Please use WUBEN or WUBEN recommended battery.
- Please don't disassemble the light or it will not be covered by WUBEN warranty policy.

Product List


Before using this product, please check whether the contents of the package are complete.

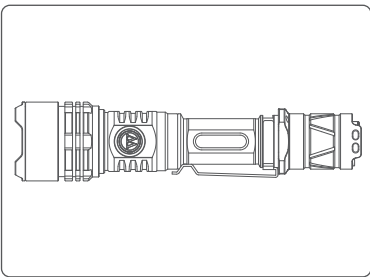


E05 x 1

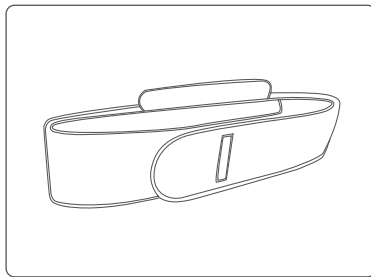 


Holster x 1

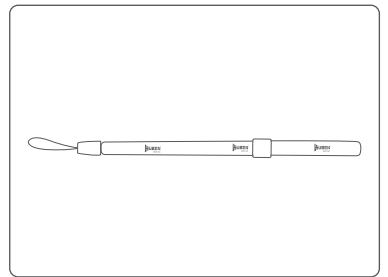 

Hand Strap x 1

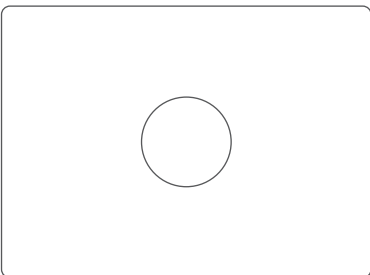 

Waterproof Ring x 2

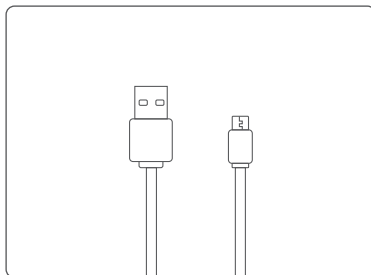 


Micro-USB Charging
Cable x 1




(Manual/Warranty Card
/Certificate) x 1

Product Operation

 
1. Product Structure

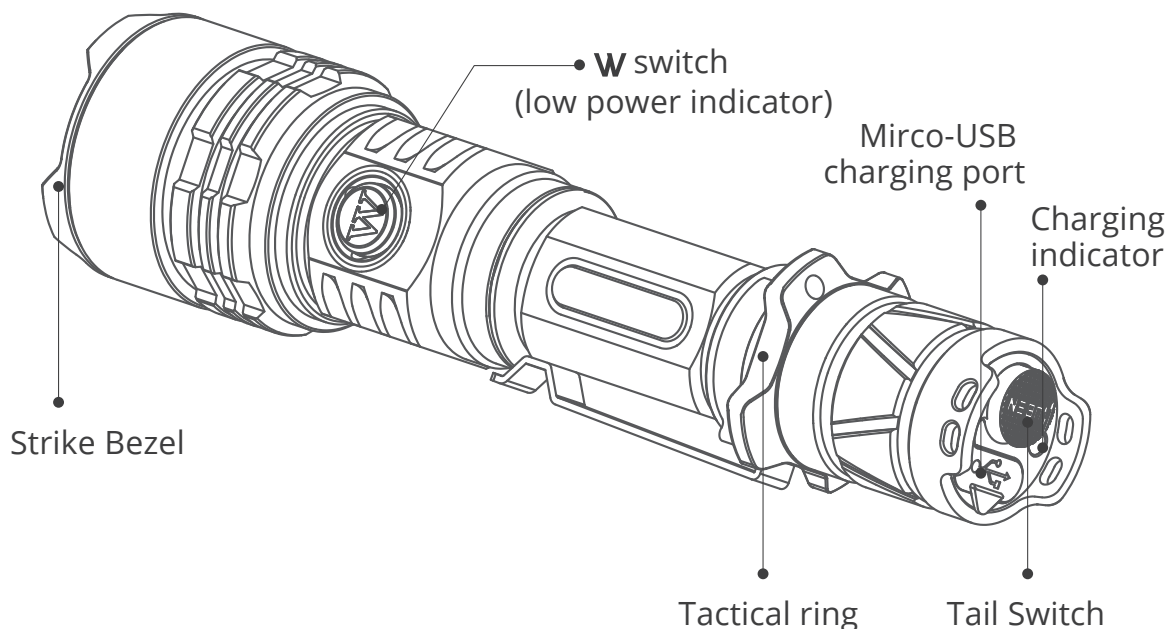

 2. Installation

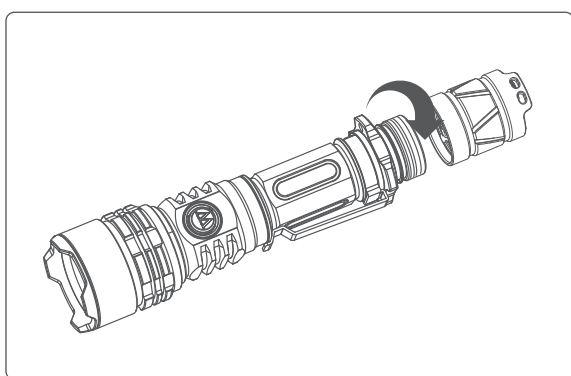

① Unscrew the tail cap

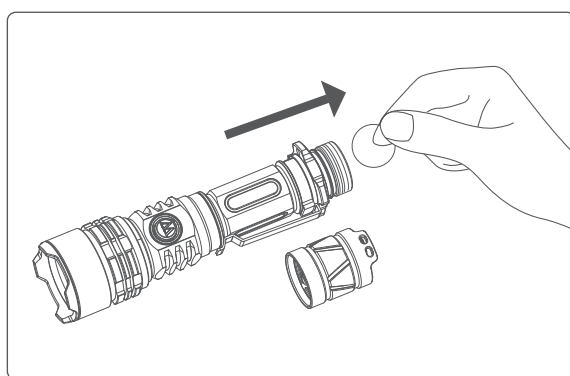 

② Take out the isolation plate before you use it

3. Operation (Classic mode)

- ① **ON/OFF:** Tap the tail switch to turn on the light temporarily, click to turn the light constant on, click again to turn it off.
- ② **Output selection:** When the light is on, click on the **W** switch to cycle through Low-Mid-High-Turbo.
- ③ **Flash mode :** When the light is on, double-click on **W** switch to cycle through Strobe and SOS, click to exit the flash.

4. Operation (Tactical mode)

- ① **ON/OFF:** Tap the tail switch to turn on the light temporarily, click to turn the light constant on, click again to turn it off.
- ② **Flash mode:** Double tap on the tail switch to activate the strobe, press it down to click to lock the strobe mode.
- ③ **Output selection :** When the light is on, click on the **W** switch to switch between Strobe and Turbo, press and hold the **W** switch for 1 second to turn on the low output level, click to go back to Strobe or Turbo.

5. Mode switch

When it is on Classic mode, tap the tail switch 5 times and click on it, the main light will blink 3 times and turn on Turbo, which indicates Tactical mode. When it is on Tactical mode, tap the tail switch 5 times and click on it, the main light will blink 3 times and turn on Low, which indicates Classic mode

⚠ Classic mode is the default mode.

6. Charging

Plug the USB charging cable. Charging time will be about 4 hours. If the battery is not compatible or it is abnormal charging, red light and green light will flash alternately.







Charging battery power status indication
(Charging indicator in the tail switch)


Less than 15%	Red flash
Power 16%-40%	Red constant on
Power 41%-90%	Blue flash
Power 90%-100%	Blue constant on

7. Low battery power warning (Battery power status indicator)

Power 80%-100%	Blue constant (Turn off after 5s automatically)
Power 30%-79%	Blue flash (Turn off after 5s automatically)
Power 15%-29%	Red constant (Turn off after 5s automatically)
Power under 15%	Red flash

Parameters

FL1 Standard	Turbo	High	Med	Low	Strobe	SOS
	2000~700 Lm	500 LM	130 LM	10 LM	2000 LM	200 LM
	3+90mins	3h	8h	40h	/	/
	370m			1.5m		
	34141 cd			IPX8 (2m underwater 1h)		
Weight	191g (with battery)		Size	162.6mm x 37mm (L x D)		

 The above data tested in WUBEN laboratory, may change because of different test instruments or other factors.

Maintenance

- O-ring may lose fail to keep the light water proof, please change O-ring according to the condition to promise waterproof performance.
- Please use WUBEN or WUBEN recommended battery.
- When the battery in low status, please recharge the light or change battery in time to maintain the lifespan of the battery.
- Please clean the conductive part with alcohol dipped cloth.
- Take out the battery if put away for a long time, in case of battery leakage or possible explosion.

FAQs

Problem	Reason	Solution
Abnormal flashing or no bright	Check whether the switch is opened properly	Open the switch
	Checked whether the assembly is in the right place	Tighten the assembly parts
	Check whether the battery is charged	Charger the battery
	Check whether the battery is anti-loading	Remove the battery re-assembly
	Check if the battery contact points are dirty	Use alcohol to clean
Noise	Check whether there is a foreign body fall	Pour foreign body
	Parts damage	Return to the local dealer

If the above method has not solved your problem. Please contact local dealers for after-sales service.

Warranty policy

1. Under Warranty

- 15 days free replacement: Since the purchase date, consumer can request to replace with same or similar product for free due to quality problem within 15 days.
- 1 year free repair service: Since the purchase date, WUBEN offers free repair service due to quality problem within 1 year.
- 5 years free repair service for registered users: Since the purchase date, for registered users, WUBEN offers free repair service due to quality problem within 5 years.

- Life time repair service: Over 5 years since the purchase date,WUBEN offers repair service due to quality problem but may charge some cost according to the cost may cause.
- Negotiation is opened to any possible argument.

2.Beyond Warranty

- Breakdown due to deliberate damage.
- Breakdown due to improper operation.
- Breakdown due to battery leakage.
- Abrasion due to normal use.
- Breakdown due to irresistible reasons.
- Gift.

Final interpretation is reserved to WUBEN.

SHENZHEN SHENGQI LIGHTING TECHNOLOGY CO., LTD

E-mail: md@wubenlight.com Web: www.wubenlight.com

Add: 209# Building C, 1970 Industrial Zone, Minzhi, Longhua District, Shenzhen, China

Zip Code: 518131



wubenlight.com